



## INCRA LS Positioner Standard System

INCRA PARTS & COMPONENTS/  
Router Fence Systems



> Continued on next page for list of components.



LIST OF COMPONENTS:

ID#	PART NUMBER	NAME OF COMPONENT
1A	LS17	LS17 Base and Carriage Assy Complete
1B	LS25	LS25 Base and Carriage Assy Complete
2	JFENCE28	Pro II Joinery Fence Assy (Complete)
3	PPRF-600100	Extender Bar Assy w/Extended Stop
4A	PULT-500600	Incremental Positioning Rack, 1/32" x 6"
4B	PULT-500600M	Incremental Positioning Rack, 1mm x 6"
5	PFST-800100	Sub Fence Mounting Hardware Pack
6	PFST-200300	Nut, Rectangular 1/4"-20 (Narrow Body)
7	SHOPSTOP	Shop Stop Assy (Complete)
8	RAFJUMBO	Jumbo Right Angle Fixture Assy (Complete)
9A	PMTL-900100	Joinery Template Set (Imperial)
9B	PMTL-900100M	Joinery Template Set (Metric)
10A	PMTL-900200	Master Reference Guide (Book Only)
10B	PMTL-900200M	Master Reference Guide (Book + Metric Addendum)
11	PLSP-800100	LS Positioner (RT) Master Hdwr Pack
12	PSCA-AC	Lexan Scale, Auto Centering
13	PSCA-808C	Lexan Scale, 8"-0-8"
14	PSCA-0016R	Lexan Scale, 0"-16" (When viewed from left to right)
15	PSCA-1632R	Lexan Scale, 16" - 32" (When viewed from left to right)
16	PSCA-1600S	Lexan Scale, 16"-0" (When viewed from left to right)
17	PSCA-3216S	Lexan Scale, 32"-16" (When viewed from left to right)
18	PSCA-1600SS	Stainless Steel Scale 16"-0" w/Magnetic Tape
19	PSCA-2500SS	Stainless Steel Scale 25"-0" w/Magnetic Tape

**PLEASE REFER TO THE WEBSITE FOR THE LATEST PRICING.**

Refer to the part number(s) when ordering. To order, go to [www.incrementaltools.com](http://www.incrementaltools.com) or call 1-888-804-6272.