



INCRA TS-LS Standard System

INCRA PARTS & COMPONENTS/ Table Saw Fence Systems



> Continued on next page for list of components.



LIST OF COMPONENTS:

ID#	PART NUMBER	NAME OF COMPONENT
1	LS32	LS32 Base and Carriage Assy Complete
2A	PTSL-600400	TS-LS Standard Base Support Panel, 28.5"
2B	PTSL-600500	TS-LS XL Base Support Panel, 34"
2C	PTSL-600600	TS-LS XL Base Support Panel, 40"
3A	PTSL-600700	Rail Extrusion, 72"
3B	PTSL-600800	Rail Extrusion, 92"
4	PTSL-700100	Fence Glide Assy (infeed)
5	PKNB-100200	Knob, 1/4"-20 x 3/4" (Infeed Fence Glide)
6A	PTSL-600100	TS-III A Standard Rip Fence, 36"
6B	PTSL-600200	TS-III A XL Rip Fence, 46.5"
7	PFST-800100	Sub Fence Mounting Hardware Pack
8	PFST-200300	Nut, Rectangular 1/4"-20 (narrow body)
9	PLSP-400200	Fence Mounting Bracket
10	PTSL-700200	Fence Glide Assy (Outfeed)
11	PTSL-800300	Rail Stop Set, Floating Pair
12	PTSL-500100	Base Clamp Glide Pads (Black), Pair
13	PTSL-800500	TS-LS Base Mount & Rails Master Hdwr Pack w/ Hex Tool
14	PTSL-800400	Base Clamping Knob Set
15	PKNB-100700	Knob, 3/8"-16 x 3/4" Stud
16	PNYL-300100	Nylon Spacer, .750 x .406 x 200"
17	PSFT-200500	Nut, Rectangular 3/8"-16, Dual Pilot
18	PTSL-800200	Rail Stop Set, Std Pair
19	PFST-200400	Nut, Rectangular 3/8"-16

> Continued on next page for list of components.



LIST OF COMPONENTS:

ID#	PART NUMBER	NAME OF COMPONENT
20	PTSL-800600	LS Positioner (TS) Owner's Manual Pack
21	PTSL-800100	Rail Mtg Brackets, Pair w/ Rail T-slot Hdwr
22	PSCA-AC	Lexan Scale, Auto Centering
23	PSCA-0016R	Lexan Scale, 0"-16" (When viewed from left to right)
24	PSCA-1632R	Lexan Scale, 16"-32" (When viewed from left to right)
25	PSCA-1600S	Lexan Scale, 16"-0" (When viewed from left to right)
26	PSCA-3216S	Lexan Scale, 32"-16" (When viewed from left to right)
27	PSCA-4832S	Lexan Scale, 48"-32" (When viewed from left to right)
28	PSCA-6448S	Lexan Scale, 64"-48" (When viewed from left to right)
29	PSCA-3200SS	Stainless Steel Scale 32"-0" w/ Magnetic Tape
30	PFST-900100	3/16" Ball End Hex Driver
31	PTSL-600900	Base Clamp w/ Pad (ea)

PLEASE REFER TO THE WEBSITE FOR THE LATEST PRICING.

Refer to the part number(s) when ordering. To order, go to www.incrementaltools.com or call 1-888-804-6272.