


Side Winder Side Crank Installation on INCRA Router Table Stands



Note: This addendum replaces Fig/Step 10 & Fig/Step 11 of the Woodpecker provided mounting instructions. Please follow all assembly instructions of the original manual up to Fig/Step 10 before using this addendum.

If your INCRA router table stand is already assembled you will first need to remove the table top and remove the front top stretcher. Remove the lower 1/4-20 x 1/2" hex bolt from the left end of the stretcher, **Fig. 1**. Loosely attach the Side Winder Crank's side panel to the stretcher using the provided 1/4-20 x 7/8" hex bolt, washer and square nut. Place another 1/4-20 x 7/8" hex bolt with washer through the lower hole on the Crank's side panel and add the large gold washer to the fastener before loosely threading on the square nut, **Fig. 2**.

Re-assemble the stretcher to the stand sliding all 3 of the square nuts on the left end of the stretcher into the t-slot in the leg. Make sure the Crank's side panel is parallel to the leg before tightening all of the mounting bolts, **Fig. 3**.

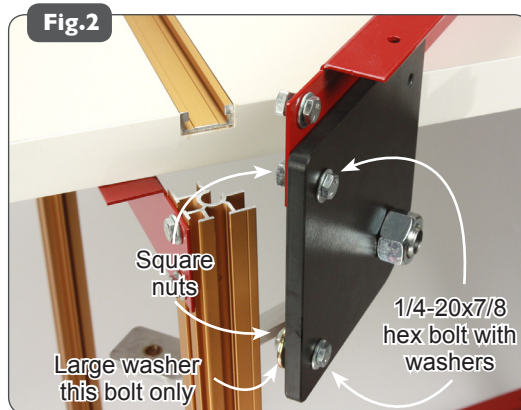

Using the remaining hole in the side panel as a guide, drill a 9/32" hole through the front stretcher, **Fig. 4**.

Place a flat washer on the remaining 1/4-20 x 7/8" hex bolt and insert through the hole on the side panel. Add a split lockwasher and a square nut then tighten the assembly in place, **Fig. 5**.

Continue with Fig/Step 12 in the Side Winder Owner's Manual.

